


Setting up Starter Disable in MyGeotab


Document version 0.1, August 2019

1. In the MyGeotab portal:


- Click **Vehicles** in the menu at the left of the screen
- Select the vehicles to be configured
- Click **Edit selected devices**:

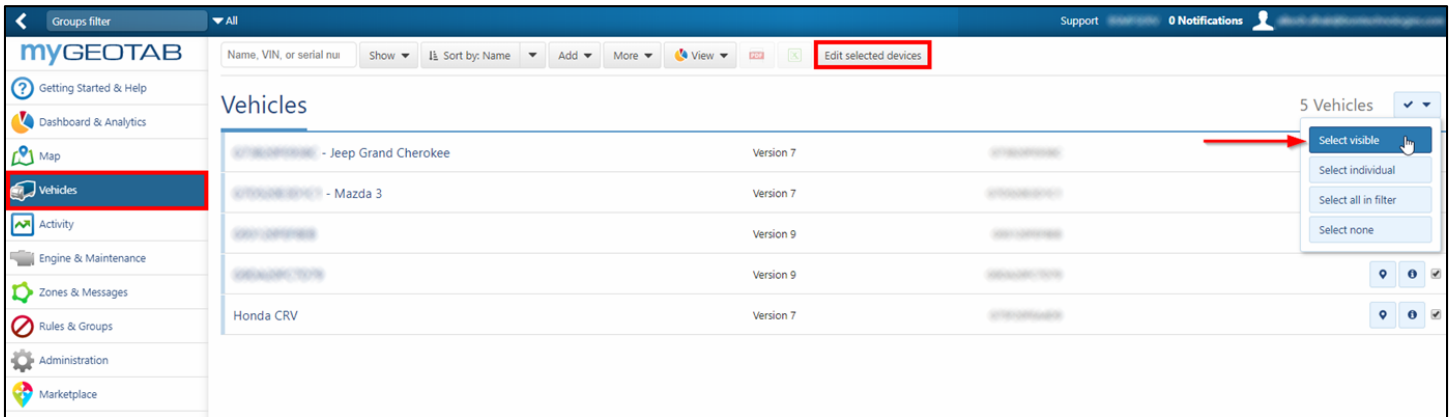


2. Click the **Driver Feedback** tab and then enable **Device beeping** and **Driver identification reminder**.
3. Set the timer to 30 seconds.

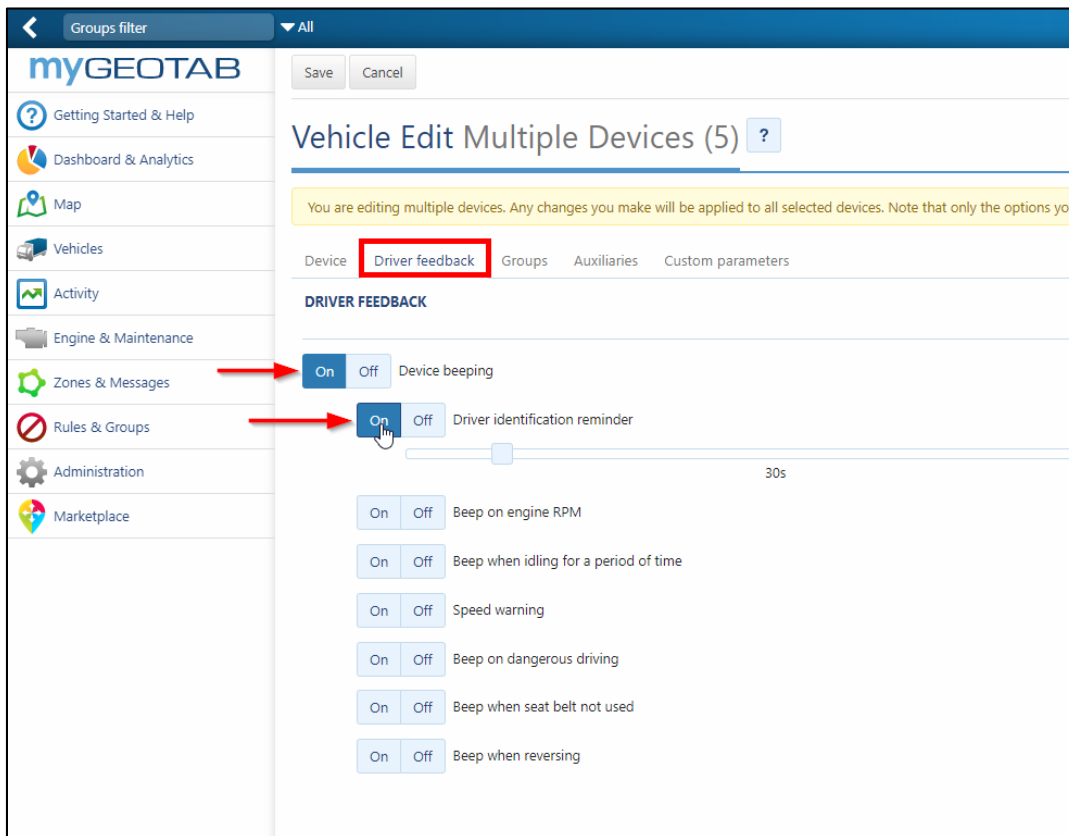


- Next, we will enable the driver ID relay. Click the **Vehicles** menu and then select the unit that you want to enable:

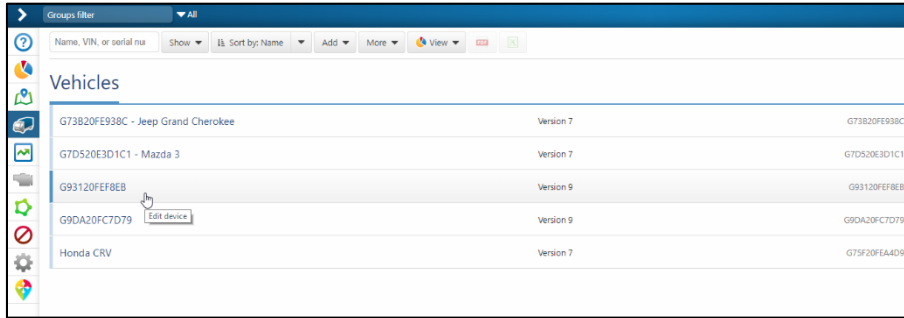

- On the vehicle's information screen, click **More Details**:

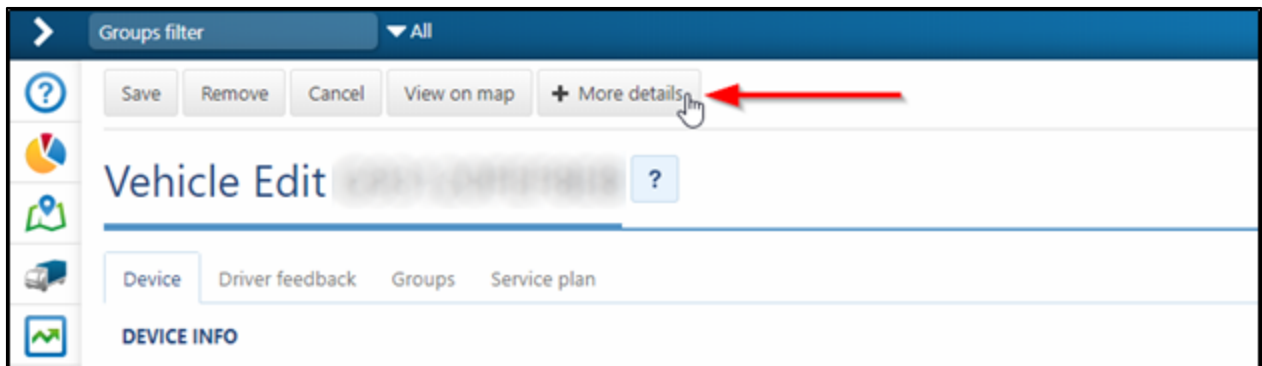

- Scroll down to the **Detailed Device Info** section, and then next to **Driver ID Relay**, select **Use driver key to control Driver ID relay**:

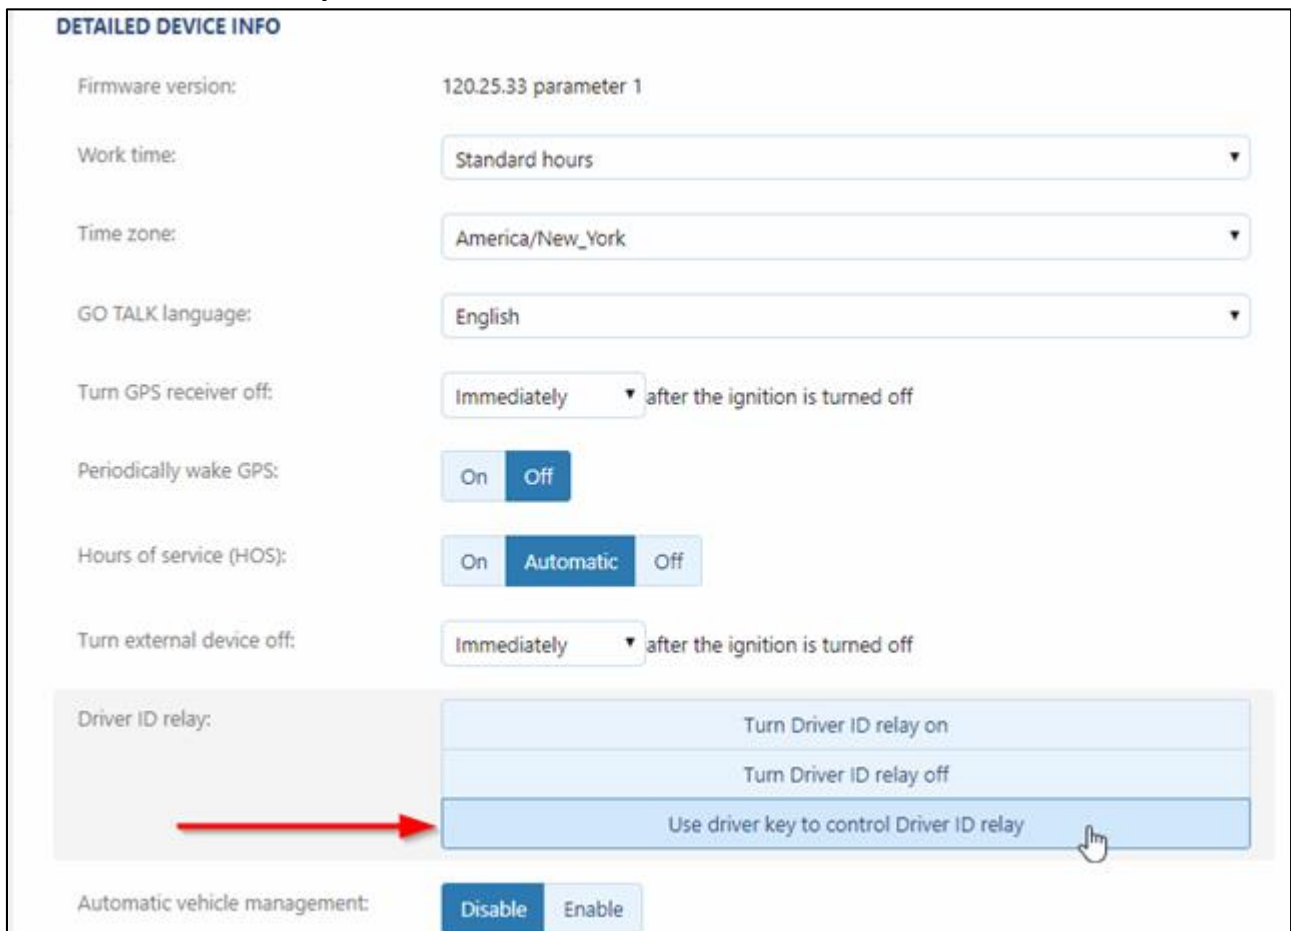

- **Turn Driver ID relay on** overrides the driver's key fob and prevents the vehicle from starting during the next ignition cycle.
 - **Turn Driver ID relay off** overrides the drivers' key fob and allows the vehicle to start.
 - **Use driver key to control Driver ID relay** requires a driver to log in before the vehicle can start.
7. It is recommended that you set up the started disable (steps 1-6 on the previous pages) for each unit in the MyGeotab portal before performing the installs. In particular, this is because step 6 can only be done once the system is installed (or upon installation).

If the device is not behaving correctly after the initial installation, ensure that you have a cellular connection and allow the device some time to detect the vehicle. Once the detection process has been completed, the new settings will take effect upon the next ignition cycle.

If the started disable relay is not operating, you can repeat step 6 to re-send the message to enable the driver ID relay.

Starter Interrupt – Starting with Key Fob

Vehicles with ignition keys

For all the following steps, make sure the brake pedal is applied.

1. Place the key in the ignition and turn it to the start position and release (same as normally starting the vehicle).
2. Swipe the key fob near the key fob reader. If successful, you will hear a beep.
3. At this point, the vehicle will start normally.

Vehicles with push-button ignition

For all the following steps, make sure the brake pedal is applied.

1. Push the start button (same as normally starting the vehicle).
2. Swipe the key fob near the key fob reader. If successful, you will hear a beep.
3. At this point, the device will start normally.

Grace period

Once the asset has been started with a key fob and then shut off, there is a configurable grace period where the vehicle can be restarted without having to re-swipe the key fob.