

Warning

In order to remain AOBDR compliant, you must keep a copy of this document in your vehicle at all times!

Need Help?

Contact Customer Support:

- support@webtechwireless.com
- Phone: +1 (604) 419 8163
- Toll Free (US/Canada): +1 (866) 945 4568

Hours of Operation

- Monday - Friday 6:00 am - 5:00 PM PT
- Saturday 8:00 am - 4:30 PM PT



Presenting HOS Logs for Inspection


Webtech Wireless Inc. certifies that the design of Webtech's automatic on-board recorder as defined in FMCSA CFR Title 49 Part 395.2 and 395.15 has been sufficiently tested to meet the requirements under the conditions that it will be used.

Per 395.8(a)(1)(ii), this AOBDR was installed and in use prior to December 18, 2017 and can continue to be used until December 16, 2019.


For Drivers

Preparing your logs for inspection simply involves switching Driver Center to **Inspector Mode**. Here's how:

1. Uncradle your device if you're using the MDT3500 or Android Tablet, or unclip your device if you're using an MDT3300.
2. Tap **Log Book** on the bottom panel.
3. Tap the **LOG BOOK** tab at the top left.
4. Tap the **Inspection Mode** icon near the top right.

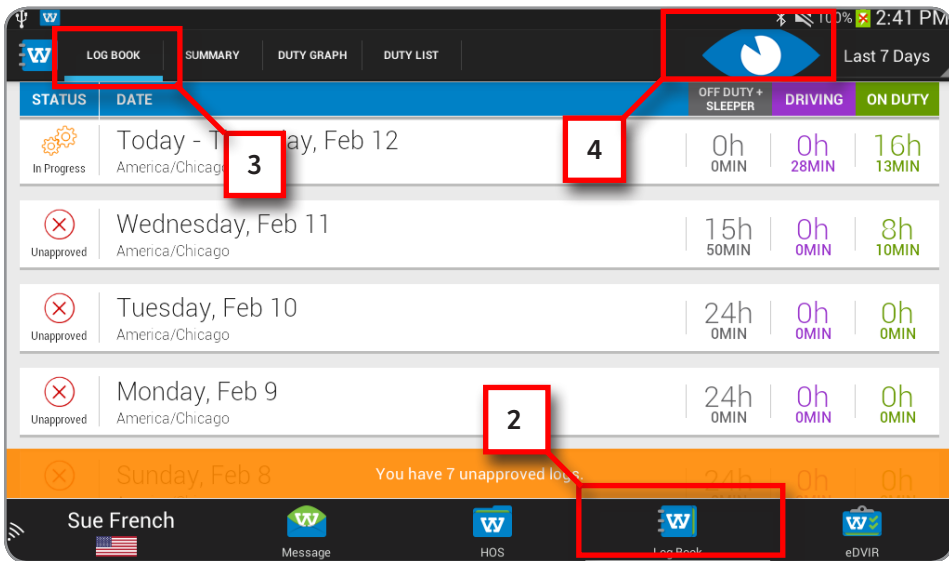


5. A dialog appears, asking if you want to begin Inspection Mode. Tap **Begin Inspection** and then hand the device to the compliance officer.

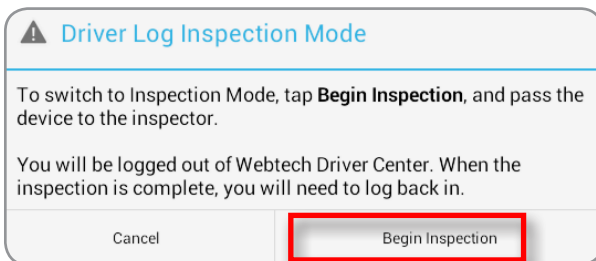


For Inspectors

You will be presented with a screen that explains how to inspect the logs. After reading the instructions, tap **Continue...** to begin the inspection.

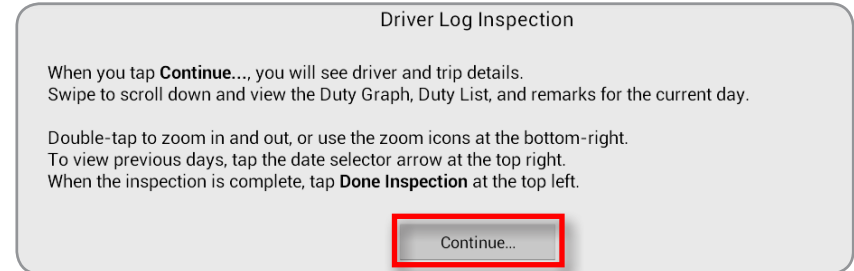

When you've finished inspecting the driver logs, tap **DONE INSPECTION** at the top left and return the device to the driver.

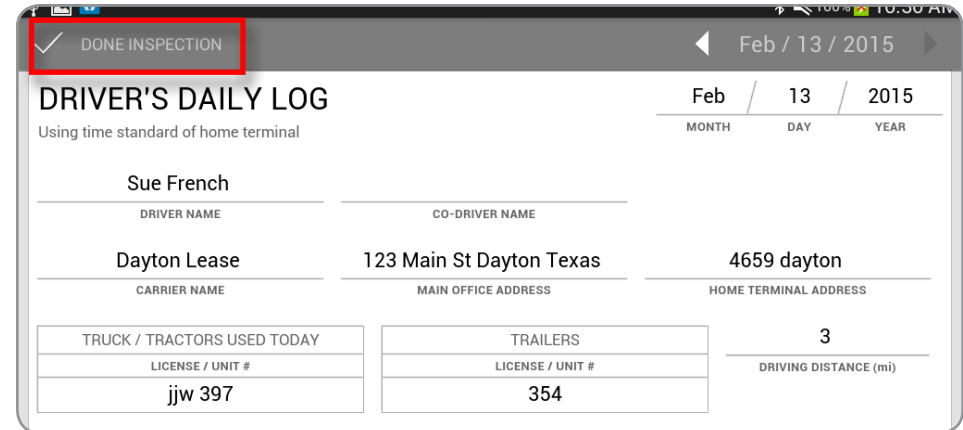

For the driver:

Log back into Driver Center and continue your activities.

